

MOLDING AND TRIM

Finish your installation with matching moldings and trim. Our prefinished moldings and trim are manufactured to match our finish to enhance the final appearance of your wood floor installation.



Reducer Strip

This molding creates a perfect transition between floors of different heights; for example, engineered wood to resilient flooring.



Stair Nosing

Stairs often take a lot of traffic and they also serve as a decorative focal point. This protective molding along the edge of a stair or step down area will catch the brunt of foot traffic, while enhancing the overall beauty of the staircase.




Baby Threshold

Baby Thresholds are used in the doorways of adjoining rooms with floors of two different heights.



T-Molding

T-Molding should be used to join two different floor surfaces that are approximately the same height; for example, engineered wood to ceramic tile.

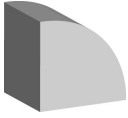

Quarter Round

The rounded profile of this molding creates a subtle blend between the floor and the wall. It can be used with or without Wall Base molding.

MOLDING INSTALLATION

Install wood moldings using traditional methods. Simply nail moldings into place with clean finishing nails.

Follow the instructions below for specific installation techniques on each molding.

Quarter Round and Wall Base

Nail Quarter Round and Wall Base molding into the **wall** with finishing nails. Wall Base and Quarter Round can either be used separately or together, each achieving a different look and style.

NOTE: Do not fasten these moldings directly into the flooring. They should be kept slightly off the floor so as not to bind or jam the flooring.

When installing Quarter Round and Wall Base it is important to miter all corners as well as junctures. Drill pilot holes for nailing in the molding to avoid wood splits and nail into the wall approximately every 18".

Finish Moldings

Use appropriate finish moldings or terminating profiles as transitions to door thresholds, steps, or other floor coverings. T-Molding, Baby Threshold, and Reducer Strip moldings can be glued or nailed to the subfloor using finishing nails.

When installing T-Molding, Baby Threshold, or Reducer Strip, first drill small pilot holes in the molding to avoid wood splits. Using the drilled holes as your guide, hammer finishing nails directly into the subfloor approximately every 18".

Stair Nosing requires a unique installation method. Be certain to glue or nail the stair nosing securely to the step or stair substrate to eliminate the possibility of the stair nosing becoming loose and causing injury.